MIDMARK®

# Operation Instructions

## 491 Removable Head Rest Mounting Kit 9A216

The following parts are included in this kit:

- one 5/32" allen wrench
- one table side quick disconnect block
- one head rest bracket assembly
- four 1/4-20 1" long flat head screws

1. Begin the installation by locking the pivot handle (1) so that the head rest will not rotate during the removal procedure.

2. Using the enclosed 5/32" allen wrench, loosen and remove the four bracket screws (2) from the original bracket (3). Set the head rest and screws aside. The screws will be used to reattach the head rest assembly to the new bracket.

3. Attach the head rest assembly (4) to the new head rest bracket assembly (5) using the four bracket screws (2) from Step 2.

4. Again, using the 5/32" allen wrench, remove the four original back section screws (6). These screws may be discarded as new screws are required to attach the table side quick disconnect block (7).

5. Install the table side quick disconnect block (7) using the 1/4-20 1" long flat head screws (8) enclosed.

6. To attach the head rest to the 491 table, slide the tapered dovetail portion of the bracket assembly (5) onto the quick disconnect block (7) attached to the table. The plunger (9) on the head rest bracket (5) must snap into place to secure the assembly.

7. To remove the head rest, pull the plunger knob (9) on the head rest assembly (4) to retract the plunger and lift the assembly out of the dovetail section attached to the table.

### Cleaning

Clean the Removable Head Rest Mounting Kit with any surgical room cleaner containing ammonia or bleach. Spray the accessory with cleaner. Wipe off excess and allow to air dry. When not in use, store the accessory in a clean, dry place.

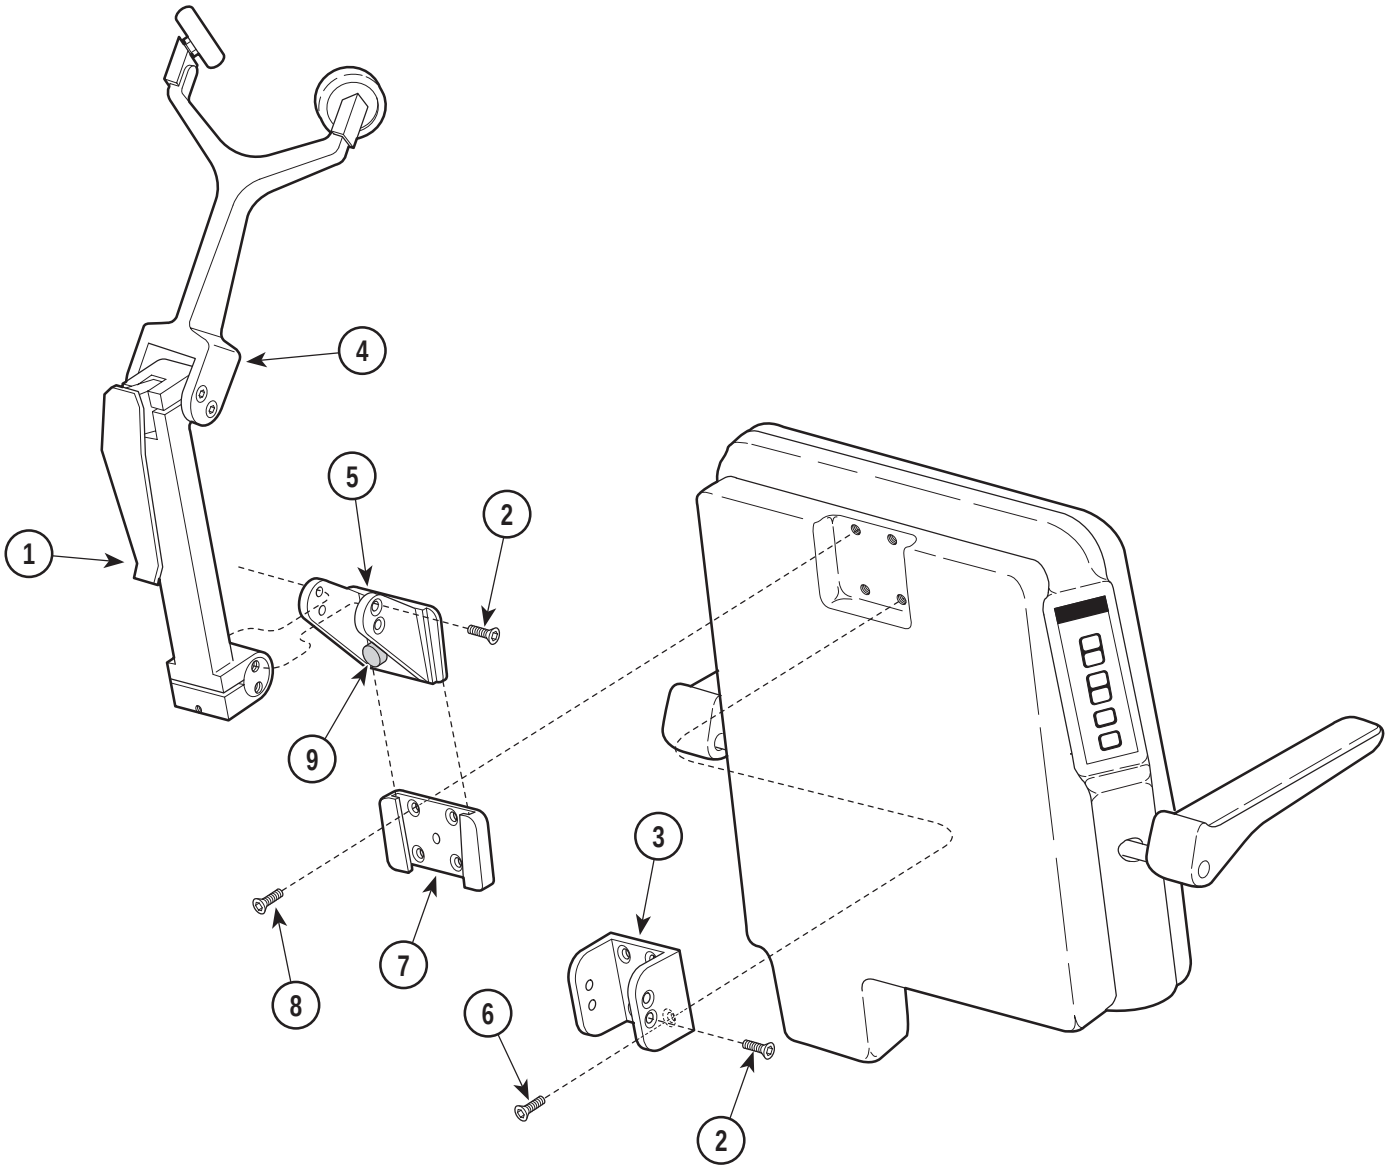


MA287000

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1995